

Настройка Wi-Fi

D-Link DIR-300/320, Dir-620, Dir-615 (ревизия В1-В4)

Контактная информация D-Link: www.dlink.ru, 8-800-700-5465; 8 (495) 744-00-99 (звонок платный).

Для настройки открыть ваш Интернет браузер и в строке адреса набрать <http://192.168.0.1>

Прописываем в поле Username – **admin** (при условии, что роутер имеет заводские настройки, и его IP не менялся).и нажимаем Log In.



Product Page : DIR-300 Hardware Version : B1 Firmware Version : 2.04

D-Link

LOGIN


Log in to the router:

User Name

Password

WIRELESS

На вкладке **Setup**, выберите вкладку **WIRELESS SETTINGS**. Нажмите кнопку **Manual Wireless Network Setup**.

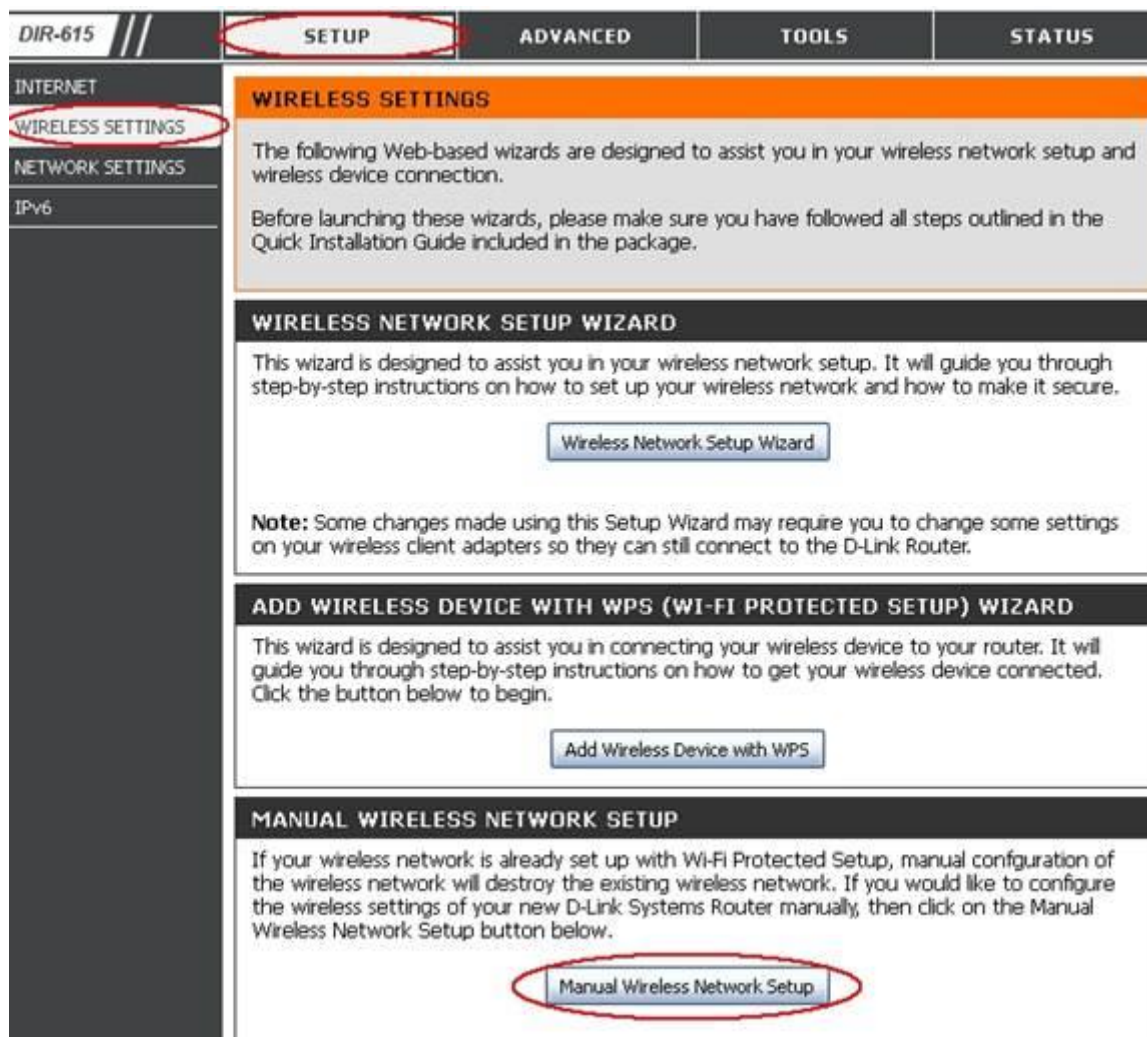

DIR-615 // **SETUP** ADVANCED TOOLS STATUS

INTERNET

WIRELESS SETTINGS

NETWORK SETTINGS

IPv6

WIRELESS SETTINGS

The following Web-based wizards are designed to assist you in your wireless network setup and wireless device connection.

Before launching these wizards, please make sure you have followed all steps outlined in the Quick Installation Guide included in the package.

WIRELESS NETWORK SETUP WIZARD

This wizard is designed to assist you in your wireless network setup. It will guide you through step-by-step instructions on how to set up your wireless network and how to make it secure.

Note: Some changes made using this Setup Wizard may require you to change some settings on your wireless client adapters so they can still connect to the D-Link Router.

ADD WIRELESS DEVICE WITH WPS (WI-FI PROTECTED SETUP) WIZARD

This wizard is designed to assist you in connecting your wireless device to your router. It will guide you through step-by-step instructions on how to get your wireless device connected. Click the button below to begin.

MANUAL WIRELESS NETWORK SETUP

If your wireless network is already set up with Wi-Fi Protected Setup, manual configuration of the wireless network will destroy the existing wireless network. If you would like to configure the wireless settings of your new D-Link Systems Router manually, then click on the Manual Wireless Network Setup button below.

Проверьте, чтобы стояла галочка «**Enable wireless**»

В поле «**Wireless Network Name**» пропишите уникальное имя беспроводной сети (использую только латинские буквы и цифры)

WIRELESS NETWORK SETTINGS

Enable Wireless : Always

Wireless Network Name : WirelessName (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan :

Wireless Channel : 2.437 GHz - CH 6

Channel Width : Auto 20/40 MHz

Visibility Status : Visible Invisible

Настройка **шифрования** беспроводной сети

- В поле «**WIRELESS SECURITY MODE**» выберите тип шифрования «WPA-personal»
- Ниже появятся поля «**WPA**» и «**PRE-SHARED KEY**»
- Поле «**WPA**» оставьте без изменений
- В поле «**PRE-SHARED KEY**» пропишите ключ беспроводной сети (от 8 до 63 символов)

WIRELESS SECURITY MODE

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WEP, WPA-Personal, and WPA-Enterprise. WEP is the original wireless encryption standard. WPA provides a higher level of security. WPA-Personal does not require an authentication server. The WPA-Enterprise option requires an external RADIUS server.

Security Mode : WPA-Personal

WPA

Use **WPA** or **WPA2** mode to achieve a balance of strong security and best compatibility. This mode uses WPA for legacy clients while maintaining higher security with stations that are WPA2 capable. Also the strongest cipher that the client supports will be used. For best security, use **WPA2 Only** mode. This mode uses AES(CCMP) cipher and legacy stations are not allowed access with WPA security. For maximum compatibility, use **WPA Only**. This mode uses TKIP cipher. Some gaming and legacy devices work only in this mode.

To achieve better wireless performance use **WPA2 Only** security mode (or in other words AES cipher).

WPA Mode : Auto (WPA or WPA2)

Cipher Type : TKIP and AES

Group Key Update Interval : 3600 (seconds)

PRE-SHARED KEY

Enter an 8- to 63-character alphanumeric pass-phrase. For good security it should be of ample length and should not be a commonly known phrase.

Pre-Shared Key :

Нажмите кнопку «**Save Settings**»

WIRELESS

Use this section to configure the wireless settings for your D-Link Router. Please note that changes made on this section may also need to be duplicated on your Wireless Client.

Подождите 15 секунд и нажмите «**Continue**». Настройка роутера завершена.

The new settings have been saved.
Please wait 15 seconds.

Continue